Thank you for purchasing our


Cresco 28SW Fertilizer and Salt Spreader | Semi-Assembled

We're delighted to have you as a customer and are here to help! First off, let's get your product assembled!

Table of Contents:

1: Spare Parts
2: Slide System Explanation
3-5: Assembling your Cresco 28SW
6: How to Use the Cresco 28SW
7: Application Guide for Fertilisers
8: Warranty



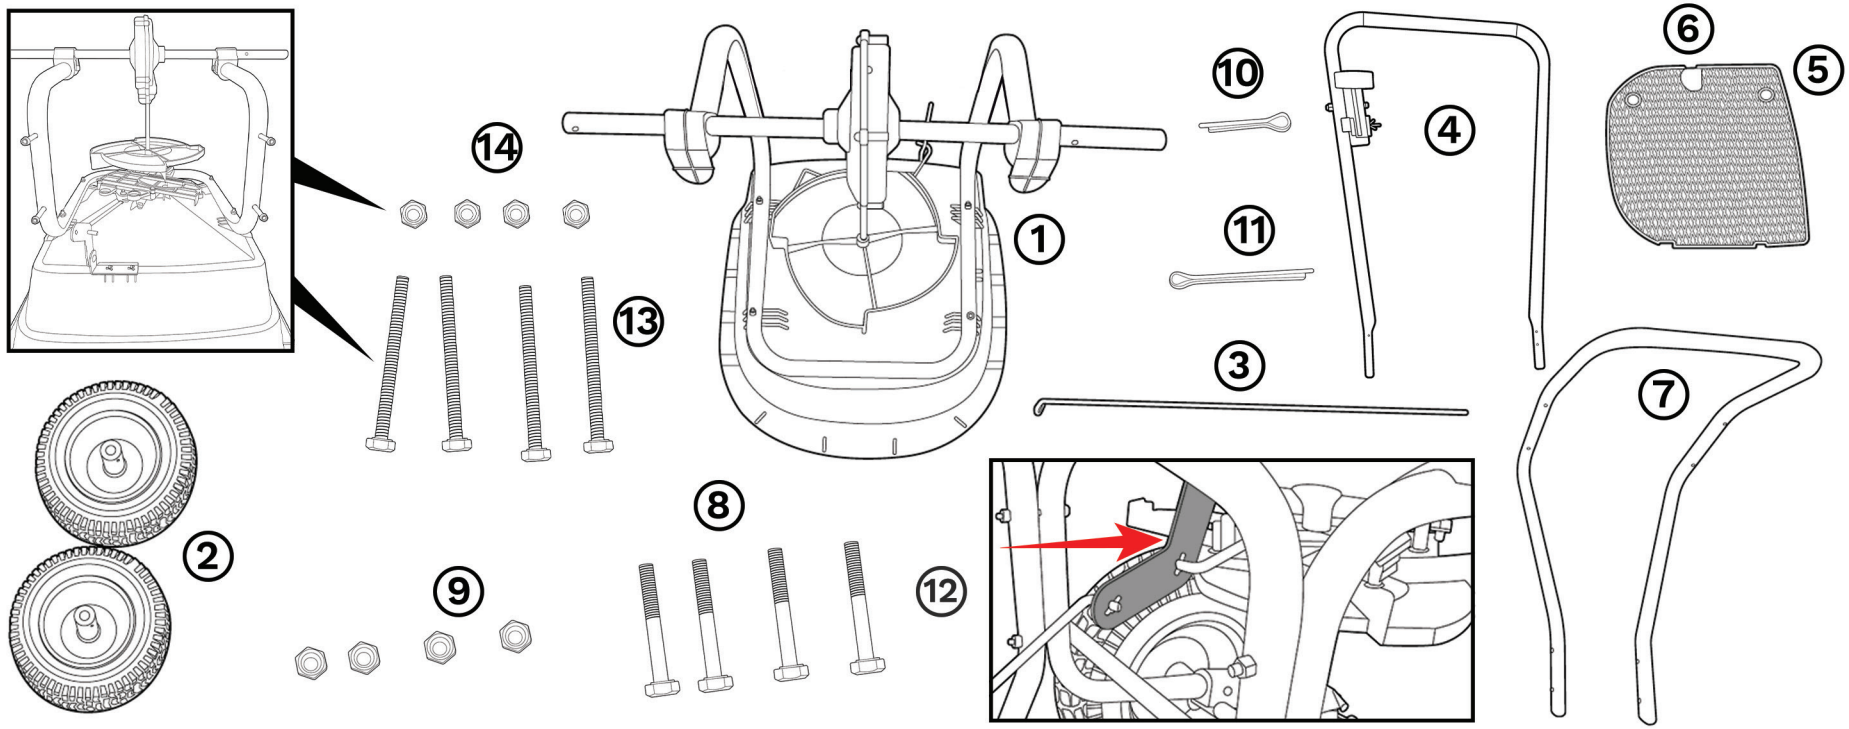

Empty all contents of the box onto a flat surface and count parts to make sure all are there.

CRESCO 28 PARTS LIST:

1. Hopper Body & Frame

2. Pneumatic Wheels

3. Control Rod

4. Loop Handle

5. Mesh Grill

6. Mesh Grill Lock

7. Back Stand

8. 4 x M6 x 45 bolts

9. 4 x M6 lock nuts

10. Small Cotter Pin

11. Large cotter pin

12. Privot Bracket

13. 4 x M6 x 65 bolts

14. 4 x M6 lock nuts


Slide System **Explanation**

***** VERY IMPORTANT *****


Your Cresco spreader comes with two different application sliders.
One is for **winter** and the other is for **summer!**



DO NOT SPREAD FERTILIZER WITH THE WINTER SLIDER

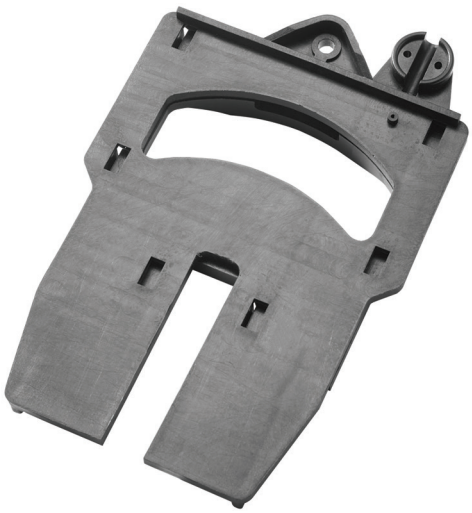

Winter Slider

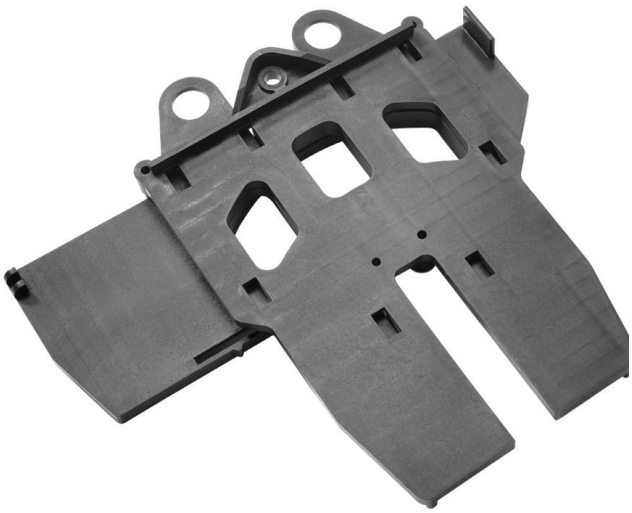


Summer Slider

Please locate and choose your slider.


Assembling your **Cresco 28SW**

1

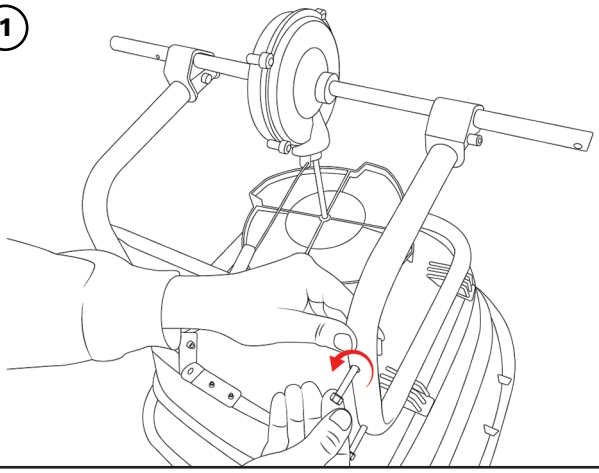


Place the Hopper body (1) on the table so that the gearbox is pointing upwards. Take the bolts out of the main frame (1) - you will use these to attach the backstand to the hopper body and main frame (1). Remove the nuts from the bolt ends.

2

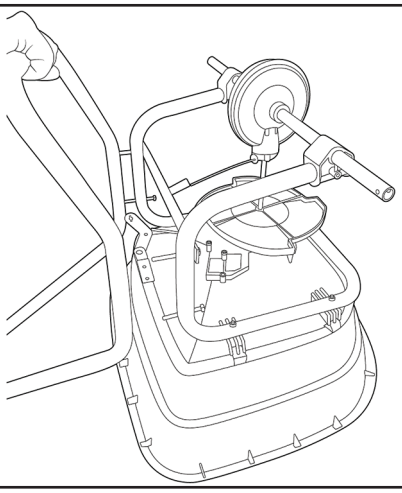


Take the backstand (7) and align it with the holes on the main frame (1). Place the four bolts through the holes available.

3

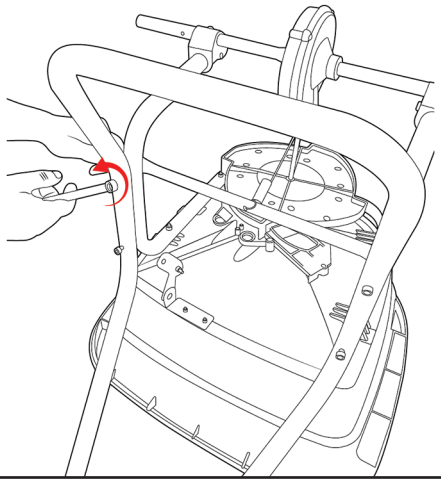


Use a spanner to tighten the lock nuts. The backstand (7) should now be securely attached to the hopper body and frame. (1).

4

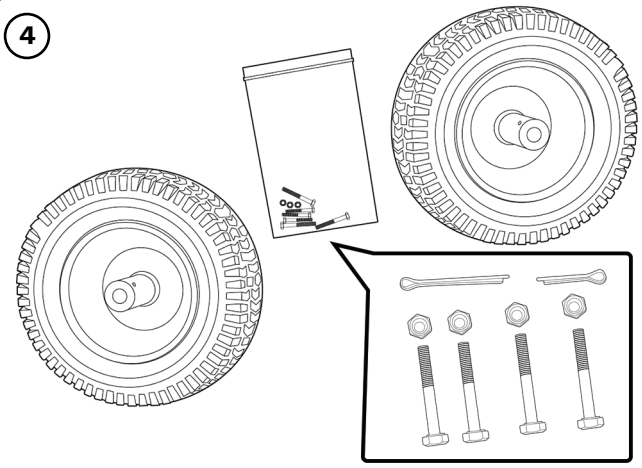


Take the pneumatic wheels (2) and slide them over the axles on each side of the main frame (1). You will also need the two cotter pins (10 &11) that sit inside the parts bag.

5

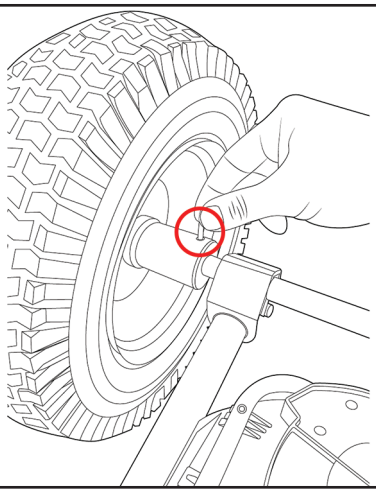


Align the hole on the inside of the pneumatic wheel (2) with the hole on the axle. Take the large cotterpin (11) and thread it through the two holes.

6

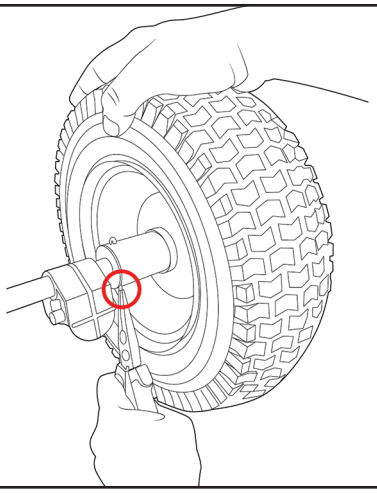


After threading the cotter pin (11) through the two holes, use a pair of plyers to pull apart the two ends of the cotter pin (11). The wheel will then be secured in place.


Assembling your **Cresco 28SW**

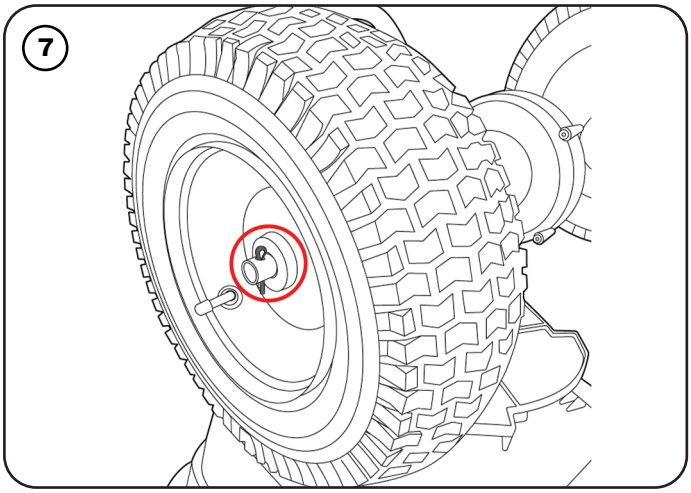


Take the small cotterpin (10) and place it through the hole on the outside of the other wheel.

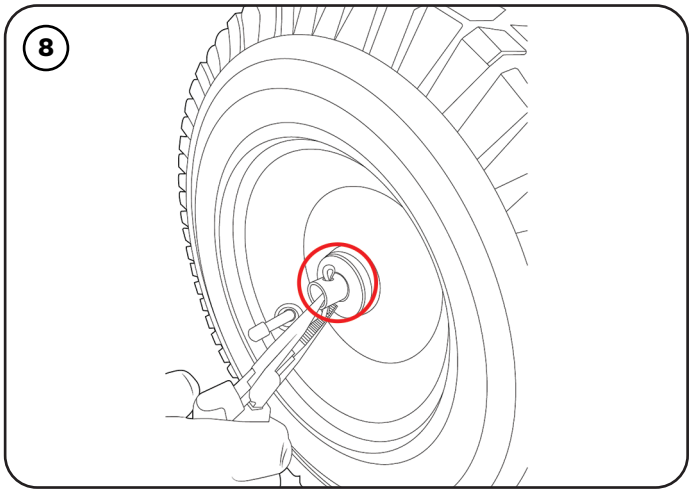


Once in position, use the same plyers to split the ends of the cotter pin (10) to hold the wheel in place.

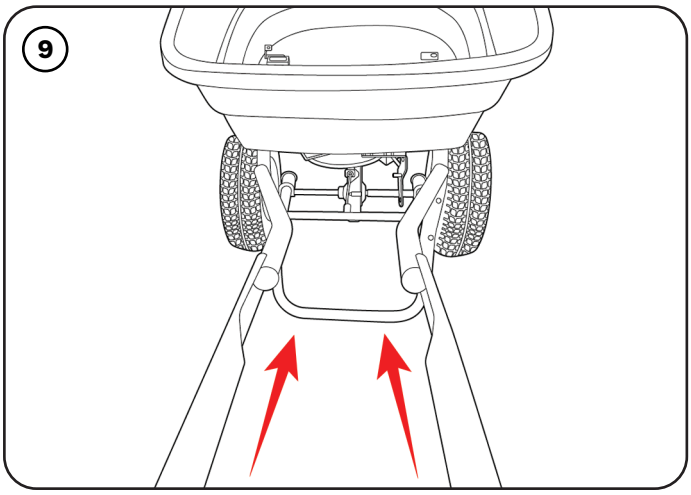


Turn the hopper body and main frame (1) over so that the spreader sits on its wheels and backstand. Take the handle bar and slide it down the two ends of the backstand.

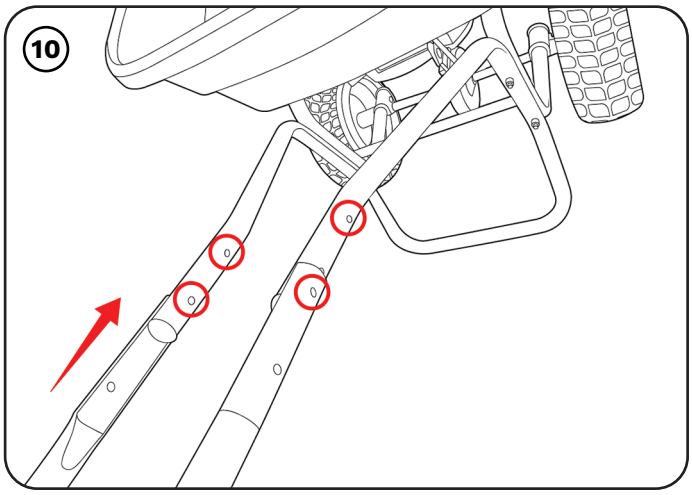

Align the holes on the handle bar and on the back stand (7).

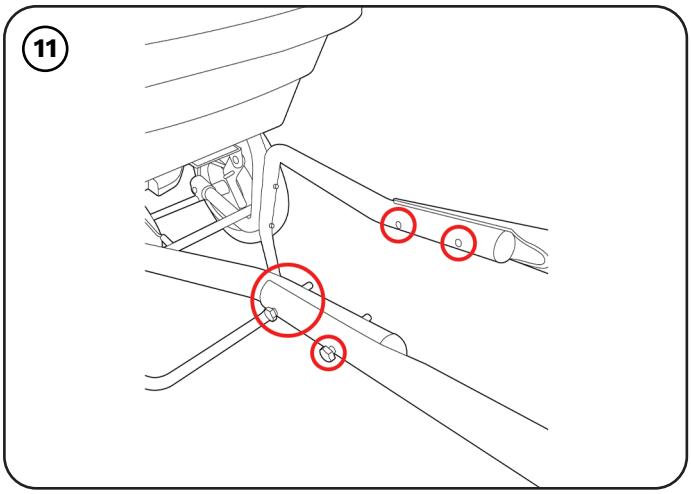


Thread the four remaining bolts (8) through the holes on the handle bar (4) and the back stand (7).

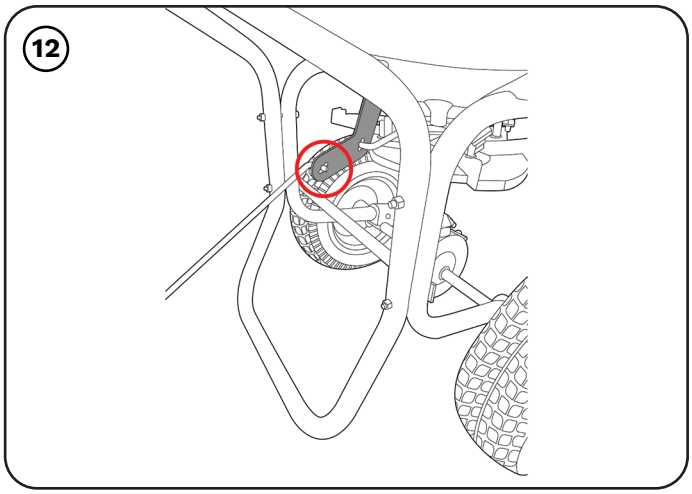


Take the bent end of the control rod (3) and thread it through the hole at the back of the pivot bracket (12). It should lock into place.


Assembling your **Cresco 28SW**

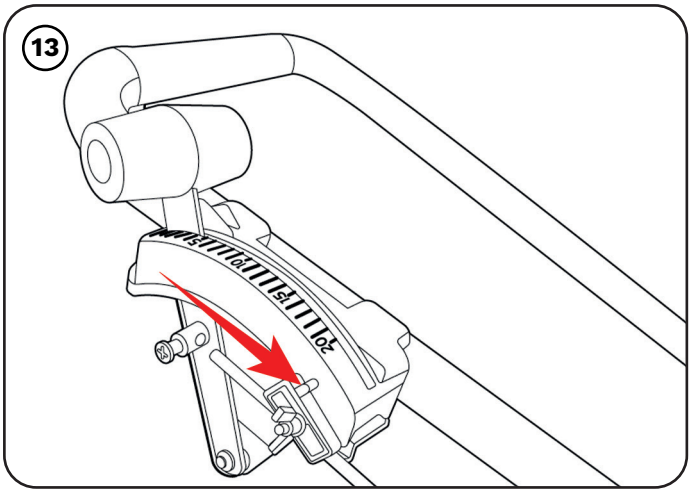


Take the other end of the control rod (3) and align it with the hole on the on/off mechanism of the loop handle (4). Push the on/off lever all the way to 20 and then hand tighten the screw.

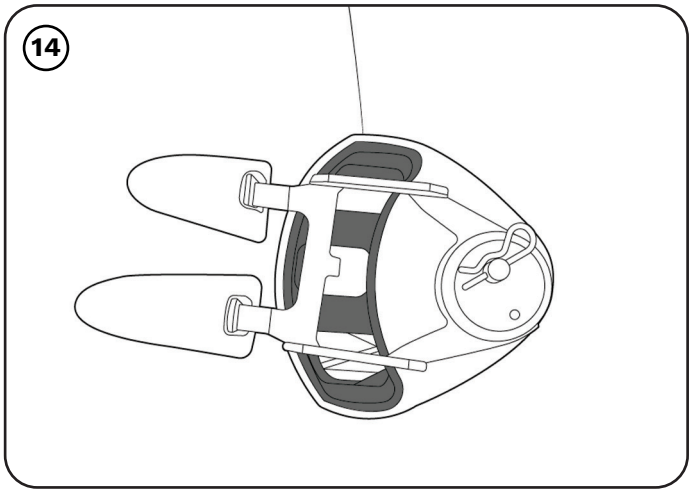


Make sure the slider at the bottom of the hopper is fully open. You should see the entirety of the holes or hole on the slide system.

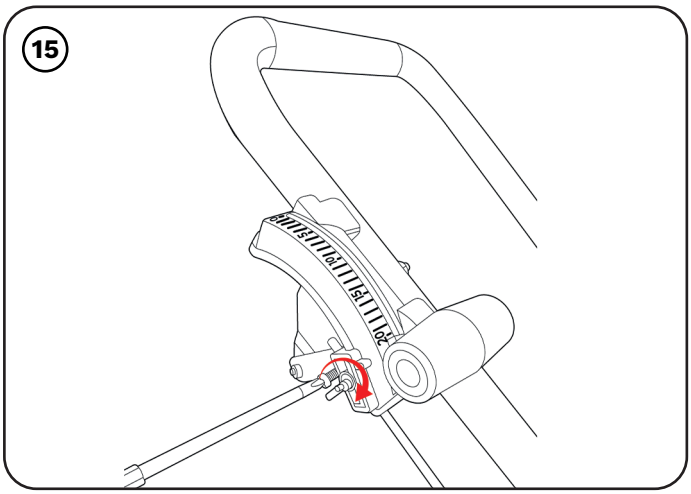

If the application hole is fully open and the lever is set at 20, tighten the screw so that the control rod (3) is secure.

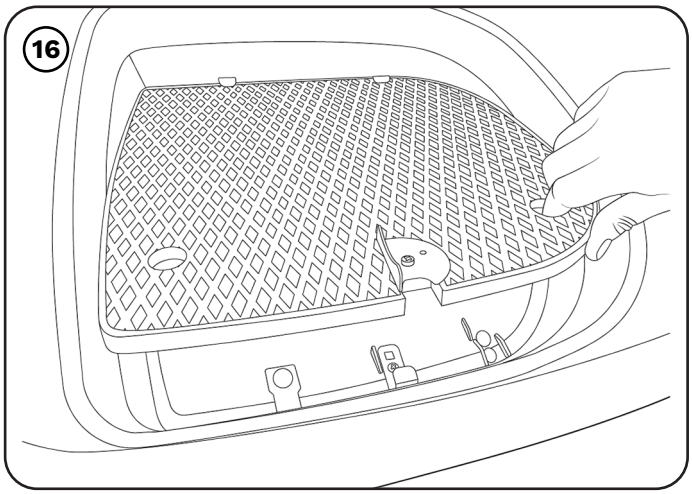

To fit the mesh grill (5) to the hopper, place the side which doesnt have the mesh grill lock (6) on in the brackets provided on the far side of the hopper.

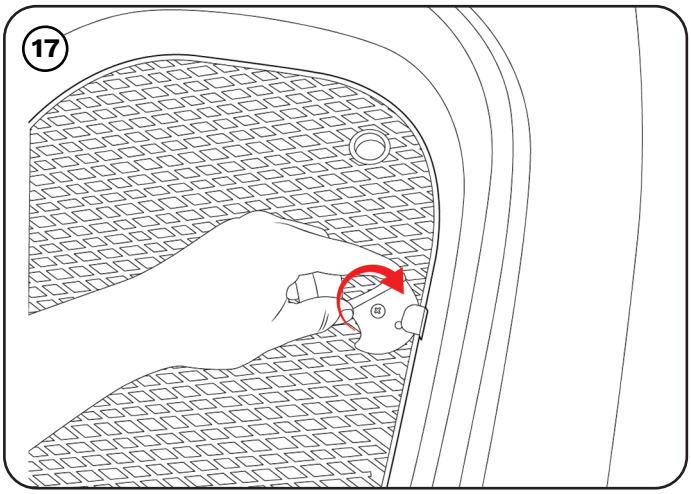


Lock the grill (5) in place by turning the mesh grill lock anti-clockwise (6).

Longitudinal Fertilizer Spreading

½ the application rate suggested on the back of your fertilizer bag.


Cover the area as shown by going over your tire marks left on the previous pass.

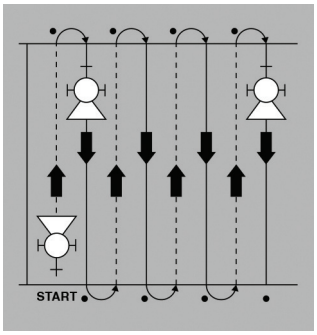

Cross Sectional Fertilizer Spreading

½ the application rate suggested on the back of your fertilizer bag.

Cover the area as shown making the second pass at the edge of your spread pattern or where the fertilizer thrown begins to feather.

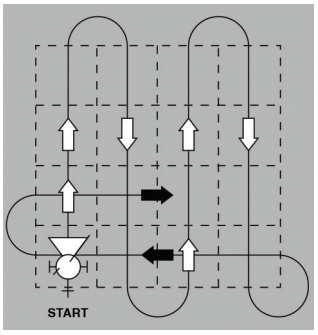

Cleaning and Maintenance

CLEANING THE SPREADER THOROUGHLY WILL SIGNIFICANTLY ENHANCE THE LIFESPAN OF YOUR SPREADER AND IMPROVE IT'S ABILITY TO SPREAD EVENLY NEXT TIME YOU USE IT.



Speed	
Mph	3
Kph	4.828
Metres p/ Sec	1.34

Calibration Setting Guide

Product		05mm - 1mm			1mm - 2mm			3mm - 5mm		
Width	**Metres**	3.5	3.5	3.5	4.0	4.0	4.0	4.5	4.5	4.5
Application Rate	**Grams /Sq M**	20	35	50	20	35	50	20	35	50
Run Time	**Secs**	10	10	10	10	10	10	10	10	10
Distance	**metres**	13.4	13.4	13.4	13.4	13.4	13.4	13.4	13.4	13.4
Area	**Sq Metres**	47	47	47	54	54	54	60	60	60
Target Weight	**Grams**	938	1,876	3,015	938	1,876	3,015	938	1,876	3,015
Setting		**8.5**	**11**	**14**	**11**	**13.5**	**19.5**	**13**	**18**	**16 (X2)**
Slider Position		**-**	**-**	**-**	**-**	**-**	**-**	**7 Clicks LHS**	**7 Clicks LHS**	**7 Clicks LHS**



Left hand slider adjuster




Right hand slider adjuster

LHS (Left hand slider adjuster) is recommended to be engaged when spreading large sized granular materials to provide a more uniform distribution on the left and right side of the spread pattern. Conversely with very light materials (e.g. grass seed) engaging the RHS (Right hand slider adjuster) will be similarly beneficial.

The manufacturer cannot be held responsible for any variations in sq. metre application volumes, or spread width differences, due to possible variations in materials, application conditions at the time and different operator application techniques.

Do not spread Fertiliser or seed materials with the winter slider

This chart should be used as a guide only.

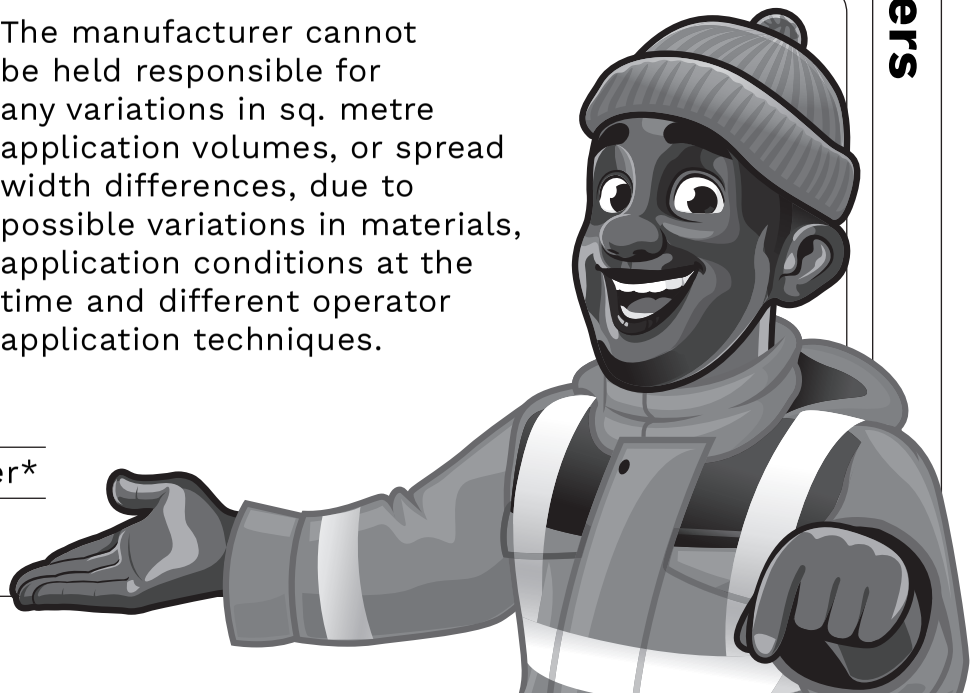


3-Year **Limited Warranty**

DMMP Ltd. warrants this product free of defects in original workmanship and materials for a period of 3 Years to the end user with the original dated purchase receipt.

If a manufacturing non-conformance is found, DMMP Ltd. will repair or replace the part(s) or product at it's discretion at no charge provided the failure is not the result of incorrect installation, mishandling, misuse, tampering, or normal wear and tear as determined by DMMP ltd.

DMMP Ltd. at its discretion may require that the part(s) or product be returned along with the original purchase receipt at owners' expense for examination and compliance with the terms of this warranty.

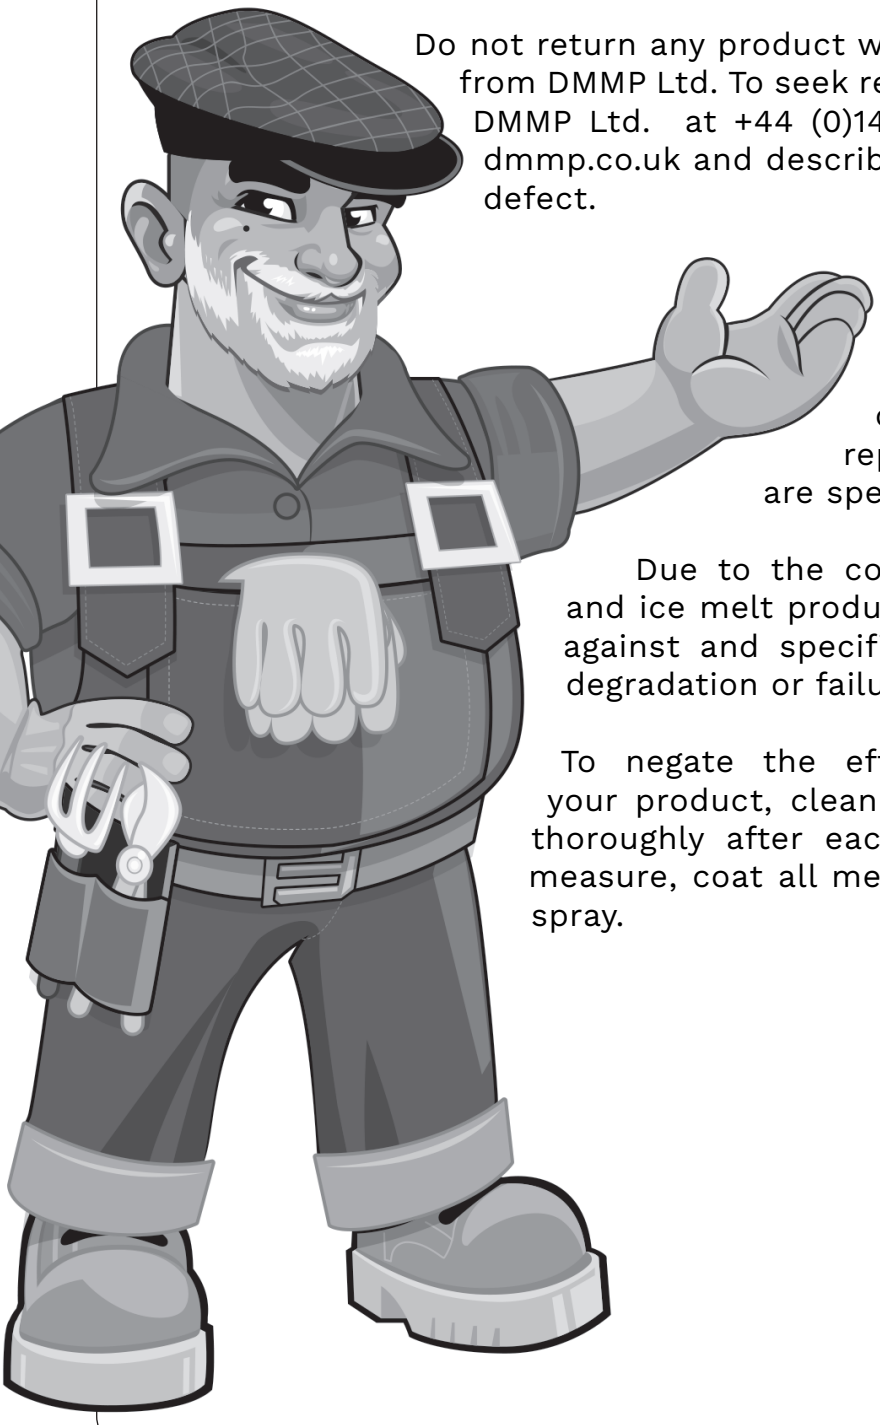

Do not return any product without first receiving authorization from DMMP Ltd. To seek remedy under this warranty, contact DMMP Ltd. at +44 (0)1455 825 400 or email us at info@dmmp.co.uk and describe the nature of the manufacturing defect.

SPECIFIC LIMITATIONS:

This warranty covers only the part(s) or product; any labour charges associated with repair or replacement of nonconformances are specifically excluded.

Due to the corrosive nature of most fertilizers and ice melt products, DMMP Ltd makes no warranty against and specifically excludes part(s) or product degradation or failure due to corrosion or its effects.

To negate the effects of corrosive materials on your product, clean and dry your spreader or seeder thoroughly after each use. As a further preventative measure, coat all metal parts with a light oil or silicon spray.