Thank you for purchasing our

Cresco 25SW Fertilizer and Salt Spreader | Semi-Assembled

We're delighted to have you as a customer and are here to help! First off, let's get your product assembled!


Scan for video assembly:

Table of Contents:

1: Spare Parts
2: Slide System Explanation
3-5: Assembling your Cresco 25SW
6-8: Slide System Explanation
9-12: How to Use the Cresco 25SW
13: Application guide for fertilisers
14: Warranty



https://crescospreaders.com/spreaders/spreads-professional/

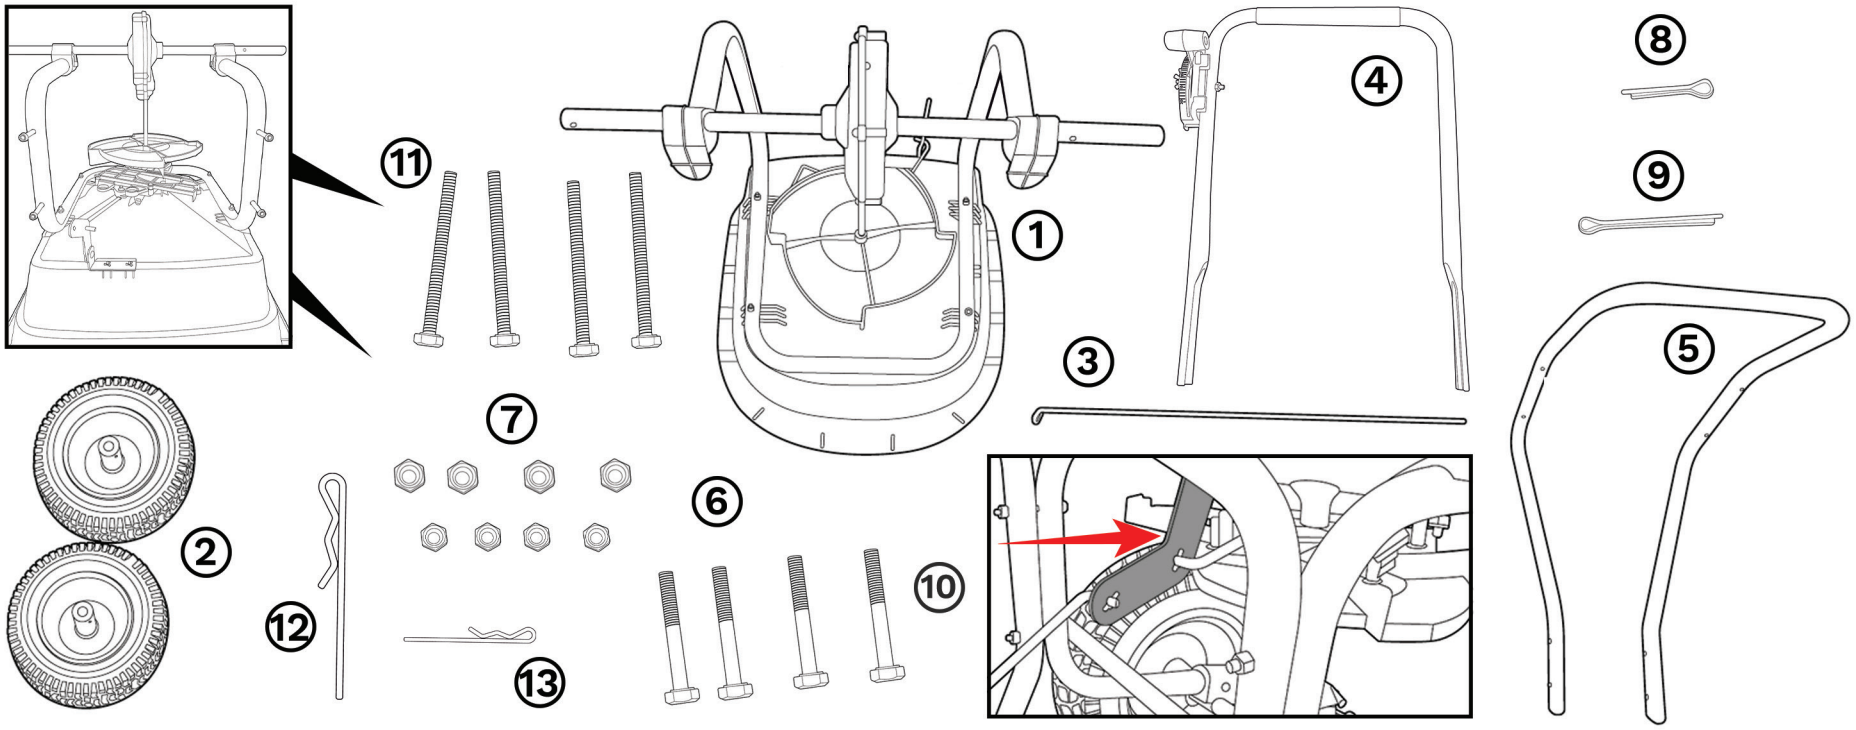

Empty all contents of the box onto a flat surface and count parts to make sure all are there.

CR25 PARTS LIST:

Hopper Body & Frame	4 x M6 x 45 Bolts	4 x M6 x 65 Bolts
Pneumatic Wheels	8 x M6 Lock Nuts	Large Agitator
Control Rod	Small Cotter Pin	Small Agitator
Handle Bar	Large Cotter Pin	
Back Stand	Privot Bracket	


Slide System **Explanation**

***** VERY IMPORTANT *****


Your Cresco spreader comes with two different application sliders.
One is for **winter** and the other is for **summer!**



DO NOT SPREAD FERTILIZER WITH THE WINTER SLIDER

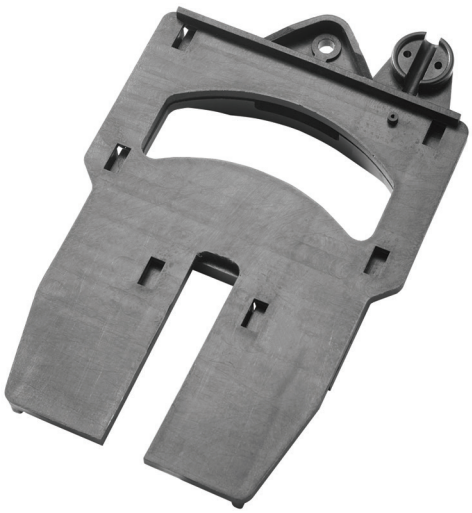

Winter Slider

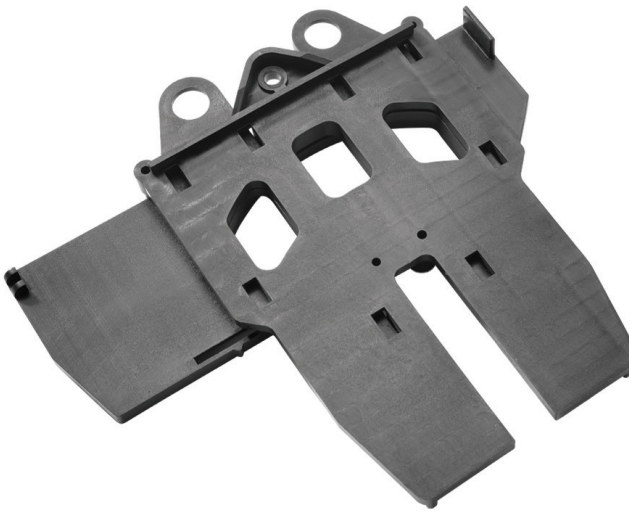


Summer Slider

Please locate and choose your slider.


Assembling your **Cresco 25**

1

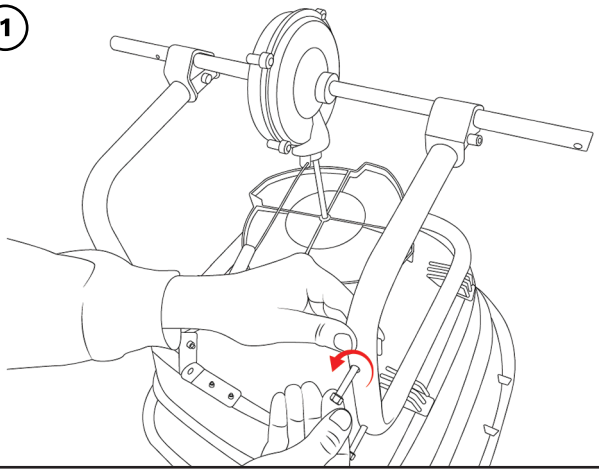


Place the Hopper body (1) on the table so that the gearbox is pointing upwards. Take the bolts out of the main frame (1) - you will use these to attach the backstand to the hopper body and main frame (1). Remove the nuts from the bolt ends.

2

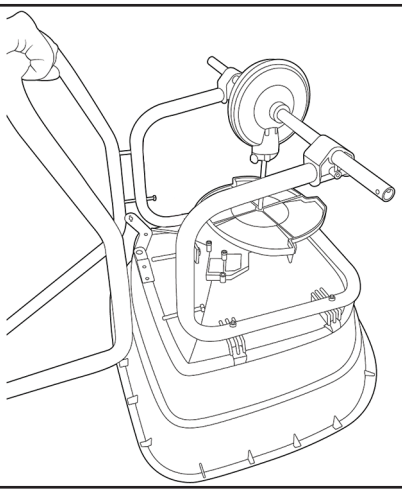


Take the backstand (5) and align it with the holes on the main frame (1). Place the four bolts through the holes available.

3

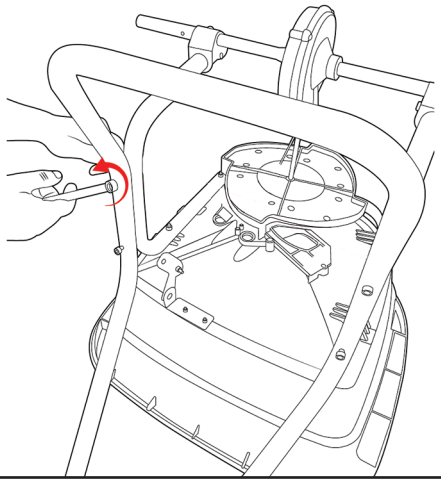


Use a spanner to tighten the lock nuts. The backstand (5) should now be securely attached to the hopper body and frame. (1).

4

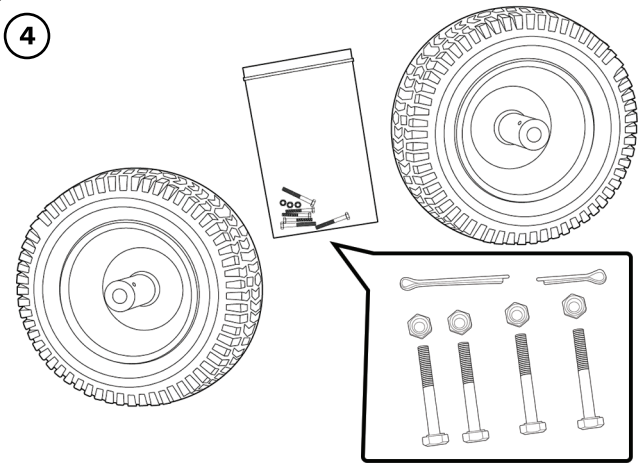


Take the pneumatic wheels (2) and slide them over the axles on each side of the main frame (1). You will also need the two cotter pins (8 & 9) that sit inside the parts bag.

5

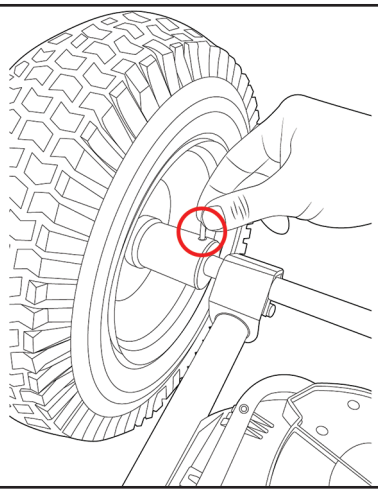


Align the hole on the inside of the pneumatic wheel (2) with the hole on the axle. Take the large cotterpin (9) and thread it through the two holes.

6

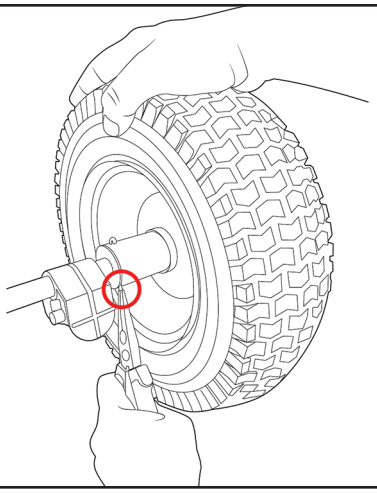


After threading the cotter pin (9) through the two holes, use a pair of plyers to pull apart the two ends of the cotter pin (9). The wheel will then be secured in place.


Assembling your **Cresco 25**

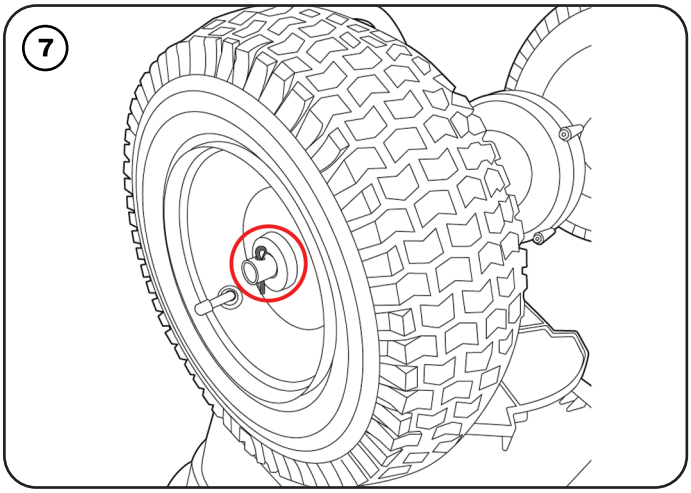


Take the small cotterpin (8) and place it through the hole on the outside of the other wheel.

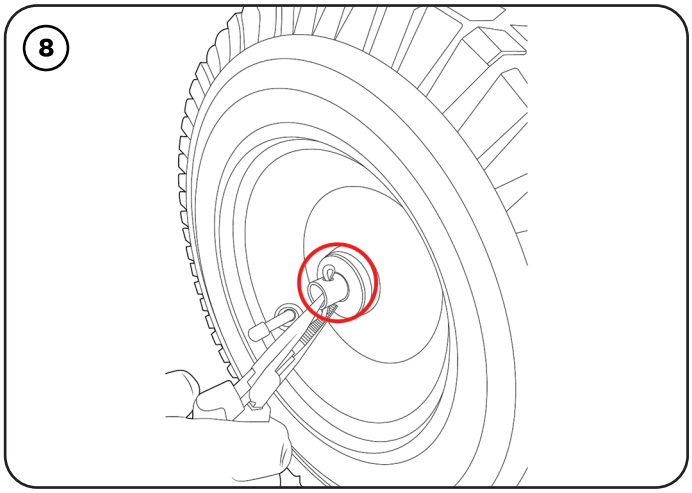


Once in position, use the same plyers to split the ends of the cotter pin (8) to hold the wheel in place.

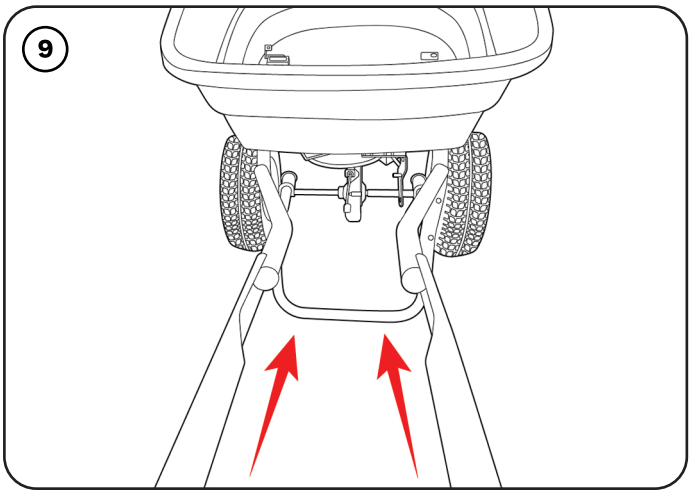


Turn the hopper body and main frame (1) over so that the spreader sits on its wheels and backstand. Take the handle bar and slide it down the two ends of the backstand.

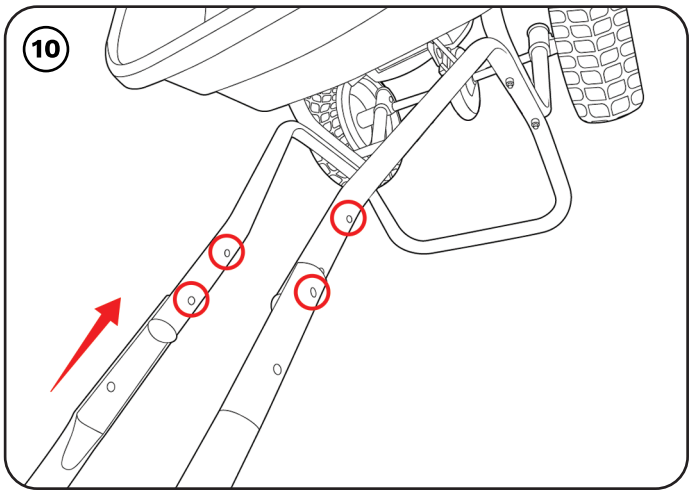

Align the holes on the handle bar and on the back stand (5).

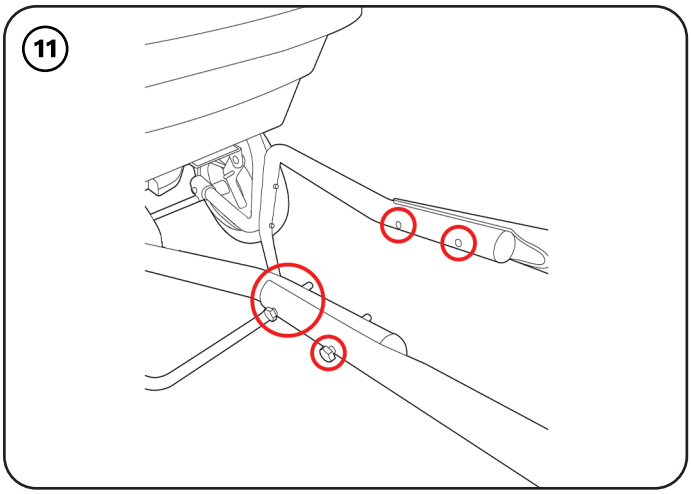


Thread the four remaining bolts (6) through the holes on the handle bar (4) and the back stand (5).

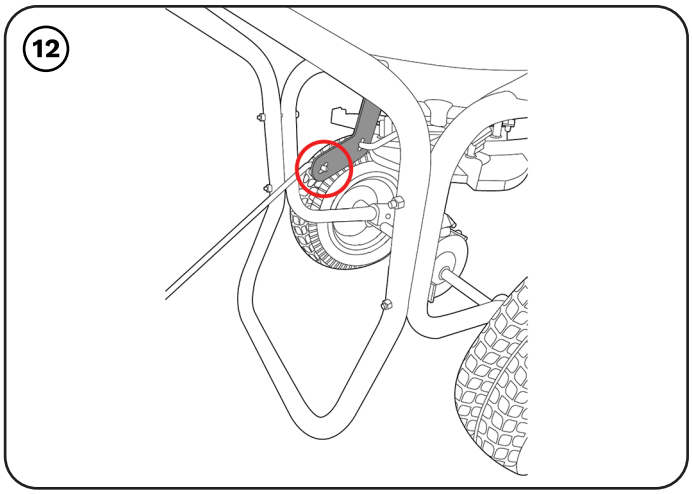


Take the bent end of the control rod (3) and thread it through the hole at the back of the pivot bracket. It should lock into place.


Assembling your **Cresco 25**

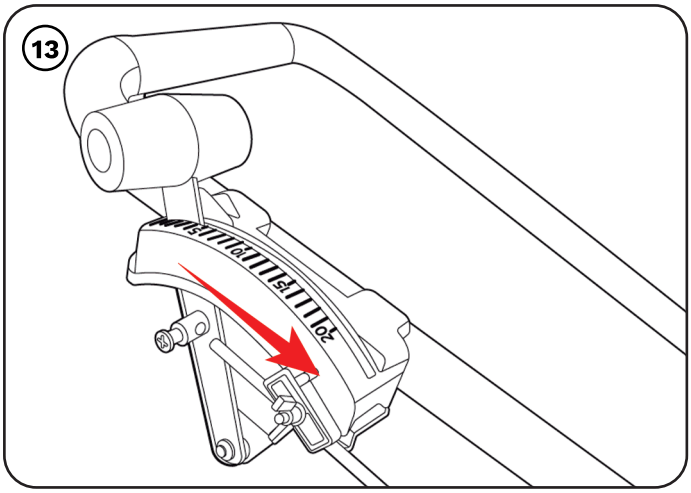

Take the other end of the control rod (3) and align it with the hole on the on/off mechanism of the handle bar (4). Push the on/off lever all the way to 20 and then hand tighten the screw.

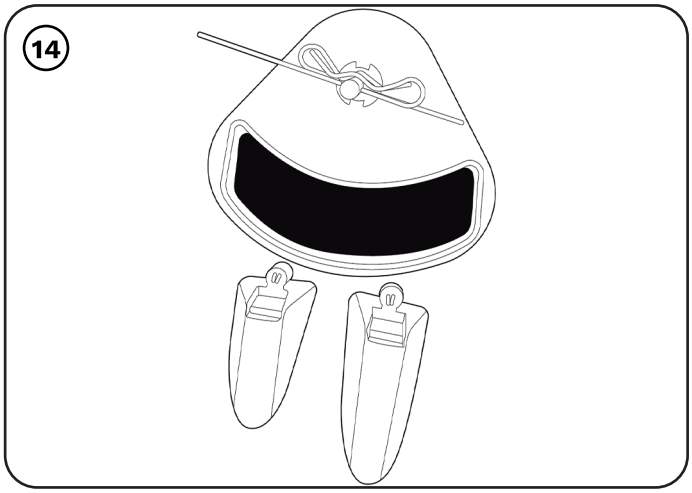

Make sure the slider at the bottom of the hopper is fully open. You should see the entirety of the holes or hole on the slide system. Insert both agitators, with the smaller one going under the larger.

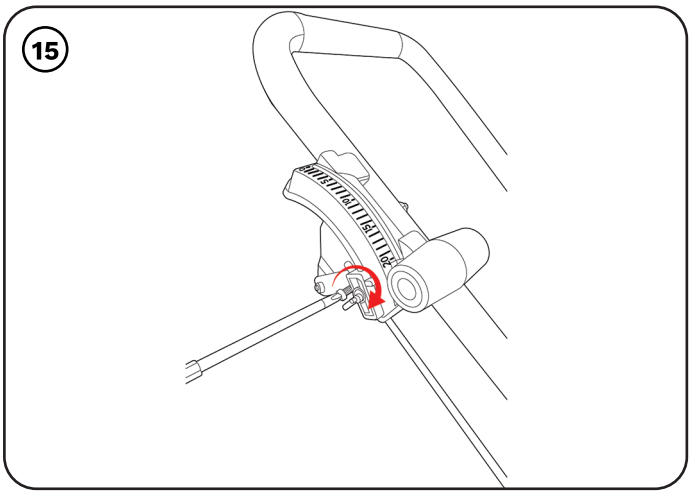

If the application hole is fully open and the lever is set at 20, tighten the screw so that the control rod (3) is secure.

Winter

For spread width 6 meters.



Pavement setting (2 meters).



Ice Melts




Summer

The summer slide system comes with 20 different settings and a border control. This slider provides control over the accuracy of your spreading.

Large/Heavy Materials

Small/Light Materials

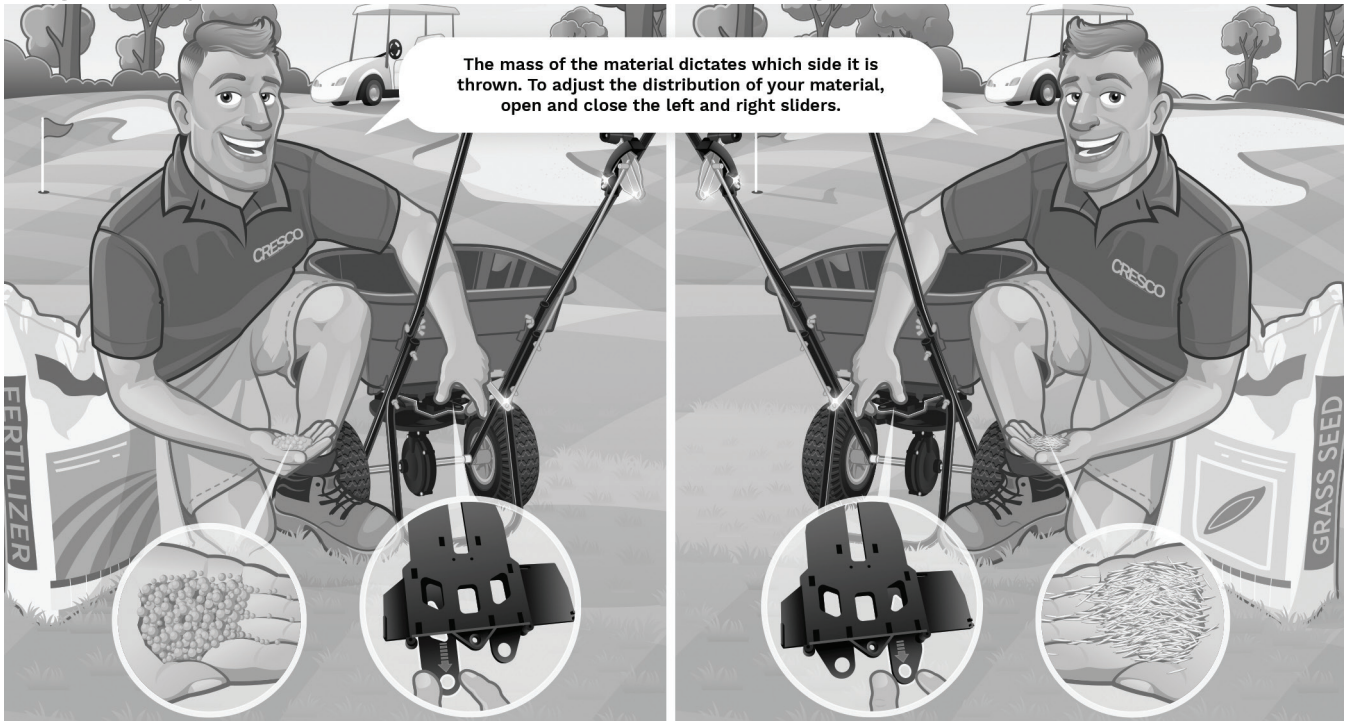

Border Control



To protect your borders simply slide the border control into position to cut off the left hand side of the spread pattern.






Slide System **Explanation**

CRESCO



SLIDE-SYSTEM TECHNOLOGY **SETTINGS**

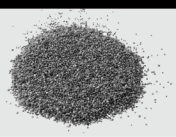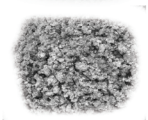

PRODUCT		SUMMER SLIDER	SLIDER ADJUSTER SETTINGS	
	POWDERED OR MICRO GRANULAR FERTILIZER		NO ADJUSTMENT OF EITHER SLIDER RECOMENDED	
	MEDIUM GRANULAR FERTILIZER		NO ADJUSTMENT OF EITHER SLIDER RECOMENDED	
	LARGE GRANULAR FERTILIZER		ADJUSTMENT OF THE LEFT SLIDER RECOMENDED 6-7 CLICKS	
	GRASS SEED OR VERY LIGHT MATERIALS		ADJUSTMENT OF THE RIGHT SLIDER RECOMENDED 3-4 CLICKS	
	PELLETED MATERIALS		ADJUSTMENT OF THE LEFT SLIDER RECOMENDED (SELECT CLOSED)	
	LARGE GRANULAR ICE MELTS		ADJUSTMENT OF THE LEFT SLIDER RECOMENDED (SELECT CLOSED)	
WINTER SLIDER				
** Please note this chart is a guide only. Due to variations in the spreading characteristics of materials, accurate calibration should be carried out by the operator for each different materal being applied.**				
	SHARP SAND		FULL OR REDUCED WIDTH SLIDER OPTION RECOMENDED	
	FLOWABLE SAND / SOIL MIX		FULL SLIDER WIDTH USE RECOMENDED	
	COARSE MARINE SALT		FULL OR REDUCED WIDTH SLIDER OPTION RECOMENDED	
	ROCK SALT		FULL SLIDER WIDTH USE RECOMENDED	
	GRIT MATERIALS		FULL SLIDER WIDTH USE RECOMENDED	

WWW.CRESCOSPREADERS.COM

DMMP Limited is not responsible for misaplication due to incorrect use or incorrect calibration of Cresco spreaders, and any other DMMP Limited spreader brands.
For calibration information please refer to "**how to calibrate**" section on the Cresco website.

How to Apply Fertilizer to your lawn like a pro in four steps!

Step 1: Understanding the application rate and settings
Step 2: Preparing the Spreader
Step 3: Walking Patterns for the optimum application
Step 4: Cleaning & Maintenance

Step 1: Understand the application rate and settings

Application Rate Settings


Check the back of the fertilizer bag to find out the recommended G/m² and spreader application setting.



If the spreader setting is not on the back of the bag, please get in touch with your fertilizer bag provider.



Set the handle to the correct setting.

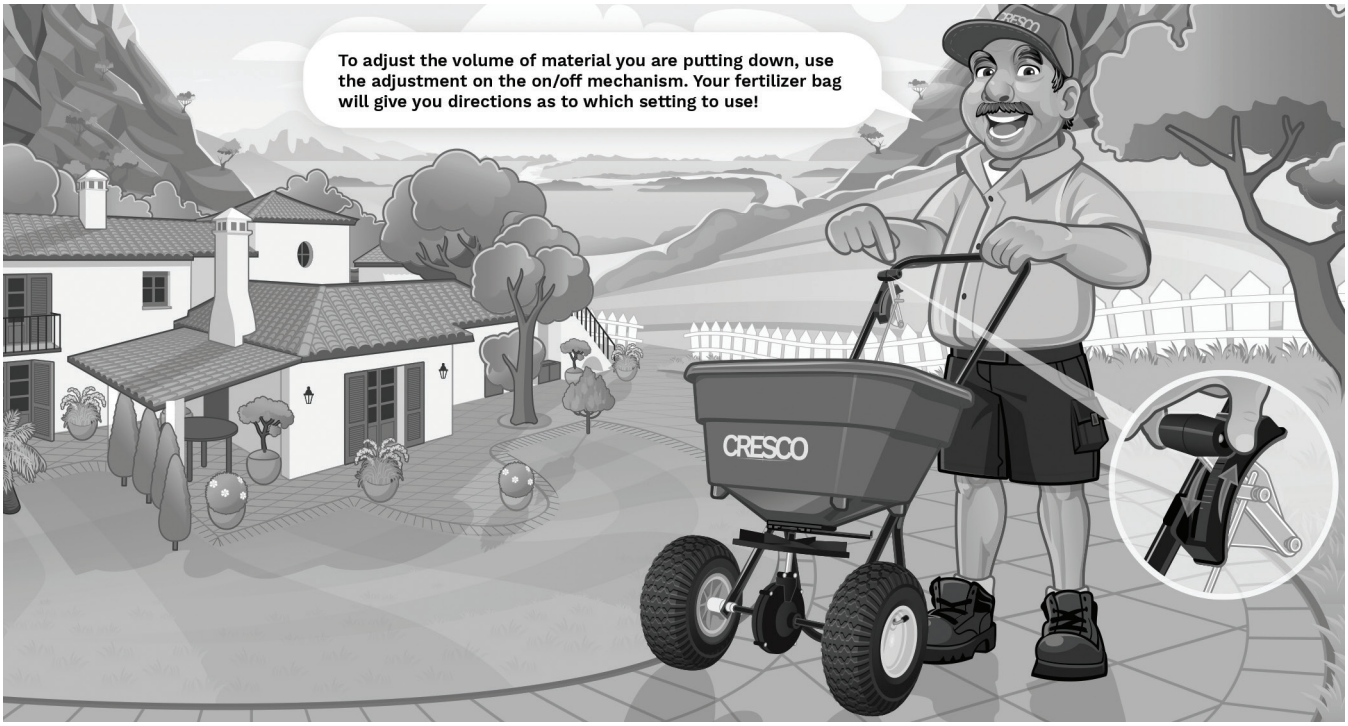

If you are unable to find the required Cresco volume setting, please visit, www.crescospreaders.com

Spread Pattern Settings


Once you have the correct application rate, you will need to check that the spread of material is even on both sides of the spread pattern.

To balance the spread pattern for your material, check online or with your fertilizer or seed provider.

For a quick reference, please refer to our guide on the previous page.



Step 2: Preparing the Spreader

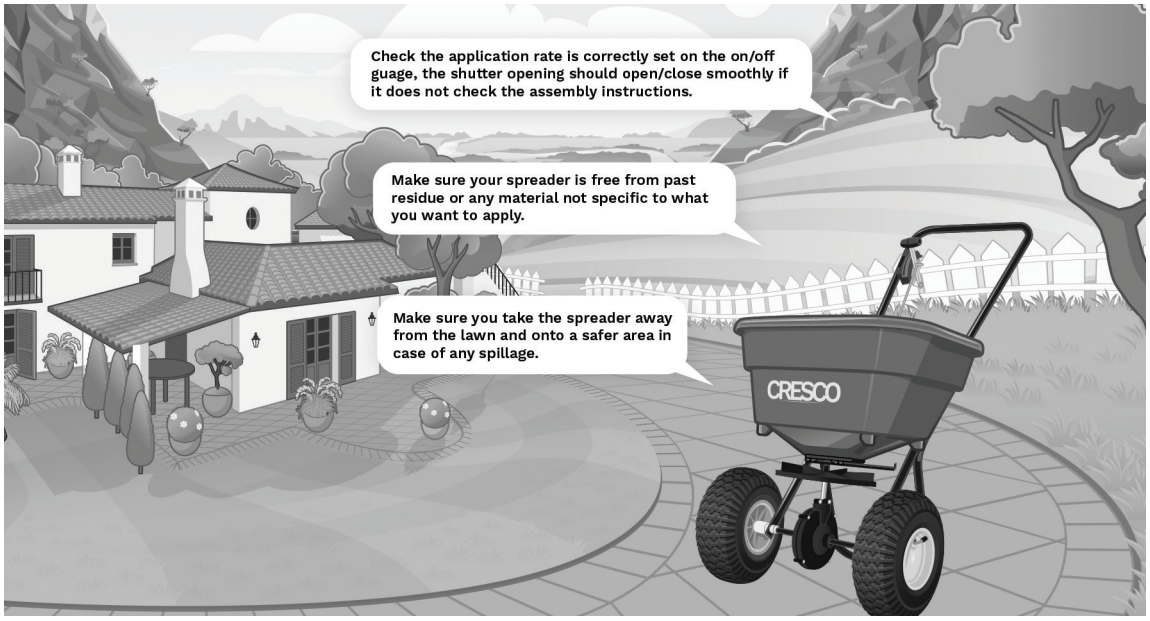

Check the material to be applied is dry and free flowing to ensure it will flow freely through the hopper. Make sure your application rate and spread pattern settings are correct, **close the application hole fully** and then pour in your material.

Your outlet hole should look like this before you pour in any material.





WARNING **Do not pour material in the hopper when the application holes are open as it can lead to spillages or leaks that can damage the area. Do not open the gauge until you are over the area you want to spread and are moving at a brisk walk***

Step 3: Walking Patterns for the optimum application (For Fertilizer Only)


There are two methods of effective spreading, longitudinal fertilizer spreading and cross sectional fertilizer spreading.

When applying fertilizer please make sure you walk at 3mph and keep the hopper in a stable, upright position.

Single Pass Fertilizer Spreading

Use ½ the application rate suggested on the back of your fertilizer bag


Cover the area as shown by passing over it in an up and down track as shown, taking into account the spread width of the material being applied.

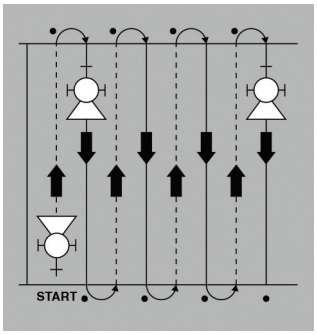

Cross Sectional Fertilizer Spreading

Use ½ the application rate suggested on the back of your fertilizer bag

Cover the area as shown. Repeating by a second pass in the same manner going across the area as shown in the diagram.

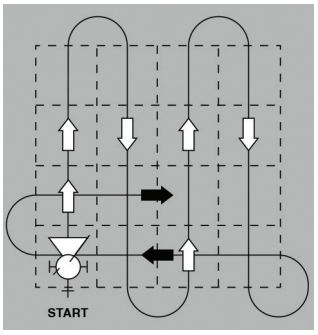

Step 4: Cleaning and Maintenance

CLEANING THE SPREADER THOROUGHLY WILL SIGNIFICANTLY ENHANCE THE LIFESPAN OF YOUR SPREADER AND IMPROVE IT'S ABILITY TO SPREAD EVENLY NEXT TIME YOU USE IT.



Speed	
Mph	3
Kph	4.828
Metres p/ Sec	1.34

Calibration Setting Guide

Product		05mm - 1mm			1mm - 2mm			3mm - 5mm		
Width	**Metres**	3.5	3.5	3.5	4.0	4.0	4.0	4.5	4.5	4.5
Application Rate	**Grams /Sq M**	20	35	50	20	35	50	20	35	50
Run Time	**Secs**	10	10	10	10	10	10	10	10	10
Distance	**metres**	13.4	13.4	13.4	13.4	13.4	13.4	13.4	13.4	13.4
Area	**Sq Metres**	47	47	47	54	54	54	60	60	60
Target Weight	**Grams**	938	1,876	3,015	938	1,876	3,015	938	1,876	3,015
Setting		**8.5**	**11**	**14**	**11**	**13.5**	**19.5**	**13**	**18**	**16 (X2)**
Slider Position		**-**	**-**	**-**	**-**	**-**	**-**	**7 Clicks LHS**	**7 Clicks LHS**	**7 Clicks LHS**



Left hand slider adjuster




Right hand slider adjuster

LHS (Left hand slider adjuster) is recommended to be engaged when spreading large sized granular materials to provide a more uniform distribution on the left and right side of the spread pattern. Conversely with very light materials (e.g. grass seed) engaging the RHS (Right hand slider adjuster) will be similarly beneficial.

The manufacturer cannot be held responsible for any variations in sq. metre application volumes, or spread width differences, due to possible variations in materials, application conditions at the time and different operator application techniques.

Do not spread Fertiliser or seed materials with the winter slider

This chart should be used as a guide only.

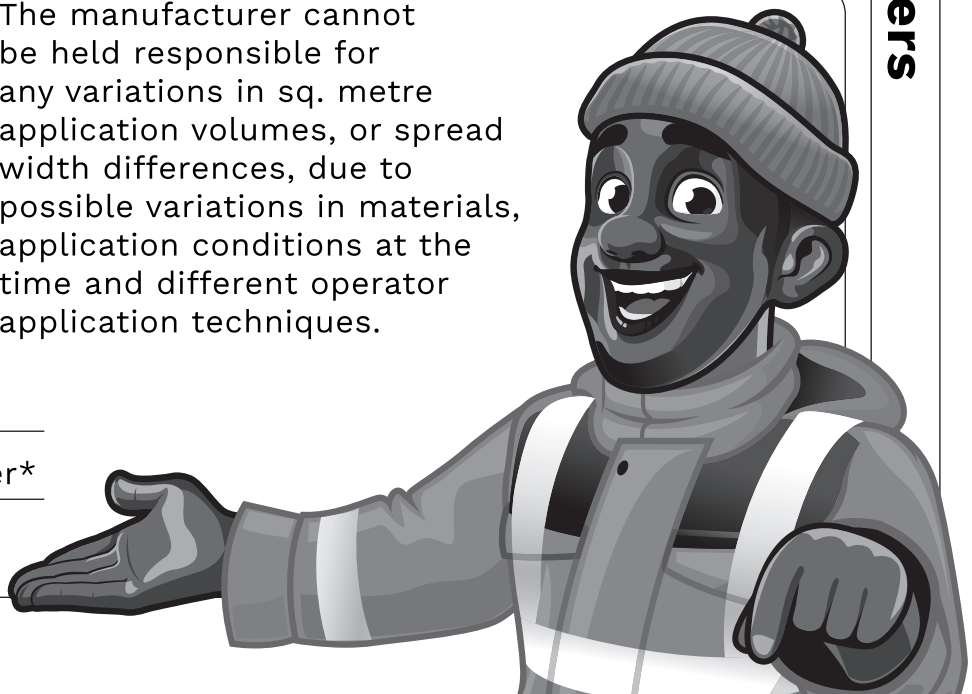


3-Year **Limited Warranty**

DMMP Ltd. warrants this product free of defects in original workmanship and materials for a period of 3 Years to the end user with the original dated purchase receipt.

If a manufacturing non-conformance is found, DMMP Ltd. will repair or replace the part(s) or product at it's discretion at no charge provided the failure is not the result of incorrect installation, mishandling, misuse, tampering, or normal wear and tear as determined by DMMP ltd.

DMMP Ltd. at its discretion may require that the part(s) or product be returned along with the original purchase receipt at owners' expense for examination and compliance with the terms of this warranty.

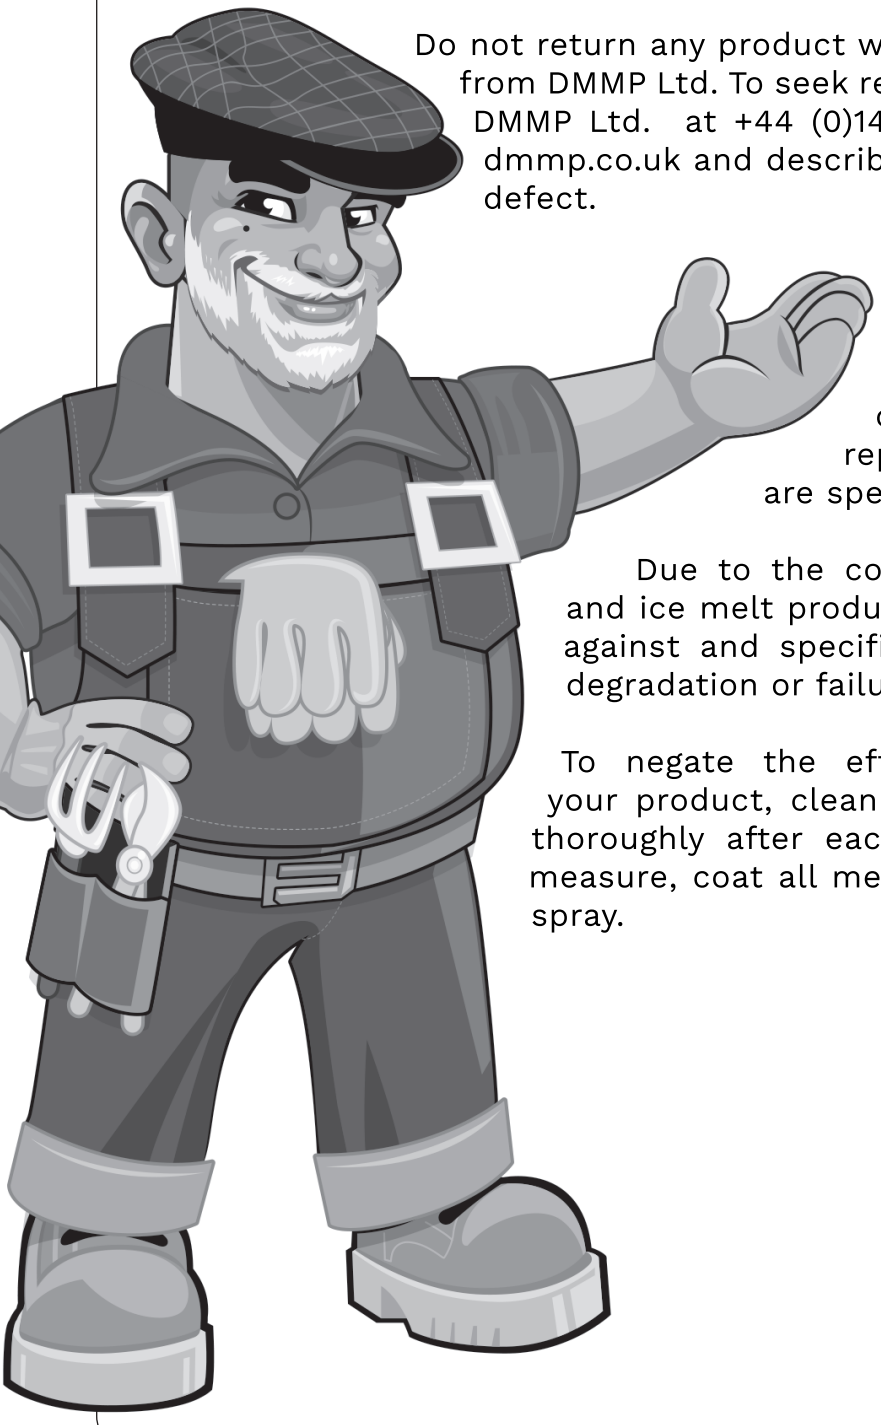

Do not return any product without first receiving authorization from DMMP Ltd. To seek remedy under this warranty, contact DMMP Ltd. at +44 (0)1455 825 400 or email us at info@dmmp.co.uk and describe the nature of the manufacturing defect.




SPECIFIC LIMITATIONS:

This warranty covers only the part(s) or product; any labour charges associated with repair or replacement of nonconformances are specifically excluded.

Due to the corrosive nature of most fertilizers and ice melt products, DMMP Ltd makes no warranty against and specifically excludes part(s) or product degradation or failure due to corrosion or its effects.

To negate the effects of corrosive materials on your product, clean and dry your spreader or seeder thoroughly after each use. As a further preventative measure, coat all metal parts with a light oil or silicon spray.

Other **Cresco Products**

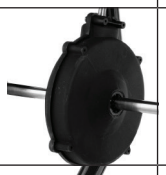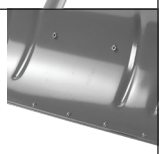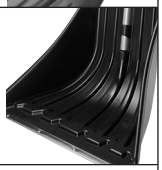Product / Season	Unique Selling Points	
Cresco 1 Code: CR001 	Ergonomic arm-rest handle for easy holding 	Large 2Kg Hopper 
Cresco 5 Code: CR005 	New heavy duty gearbox 	Easy to use on/off system 
Cresco 10SW Code: CR10SW 	Cushioned on/off lever with solid rod linkage 	Large moulded wheels 
Cresco 15SW Code: CR15SW 	A lightweight and flip back- stand allows it to be shipped fully assembled 	Pneumatic wheels allow a consistent impellor speed and a smooth drive 
Cresco 20SW Code: CR20SW 	Cushioned on/off lever with solid rod linkage 	Pneumatic Wheels 
Cresco 25SW Code: CR25SW 	Large 46Kg Warranty Fertilizer Hopper Capacity 	Strong, durable frame 
Cresco SRS Code: CRSRS 	Seed Plate Bag Included with 11 Seed Plates 	Strong row marker mounting 
Heavy Duty Snow Shovel Code: H464P 	Powder coated steel tubed handle 	Large comfortable ergonomic grip 
Wide Snow Clearer Code: H611 	Steel blade 	Steel edge to increase cutting power and longevity 
3 in 1 Foldable Snow Shovel Code: HZS212 	Anodised aluminimum head 	Teloscopic anodised aluminimum handle 
Cresco Snow Blaster Code: H595 	Two grip design makes snow removal easy and minimises lifting and stooping 	Wave ribbed design reinforces blade strength 
Polar Tough Snow Plough Code: YH74900 	Helps manage snow accumulation 	Reduces labour costs compared to a shovel 